

# 2

HOW TO GUIDES BY NEIL SULLIVAN & SONS

# POURING




**A.**

Mix the concrete by adding together the cement, sand and aggregate. Then gradually add water to mix all the components together.




**B.**

Pour the concrete into the mould; you can do this using wheelbarrows, or pumps are available. Spread out the concrete using a shovel or a rake.

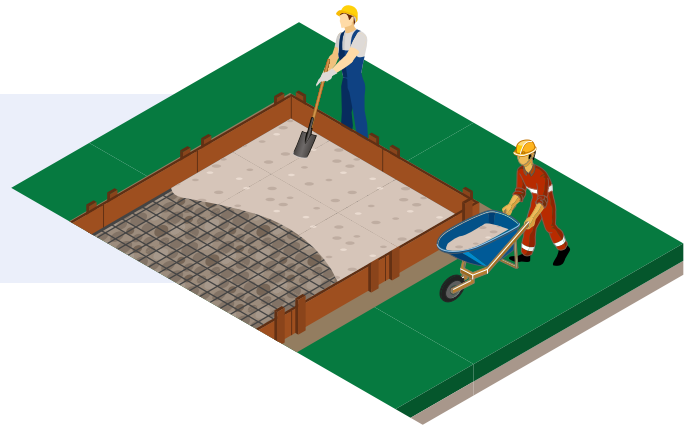

**C.**

Now you should tamp the concrete to flatten it down while it's still wet. Move a plank of wood back and forth, just over the top of your wooden perimeter, until a flat surface is created.

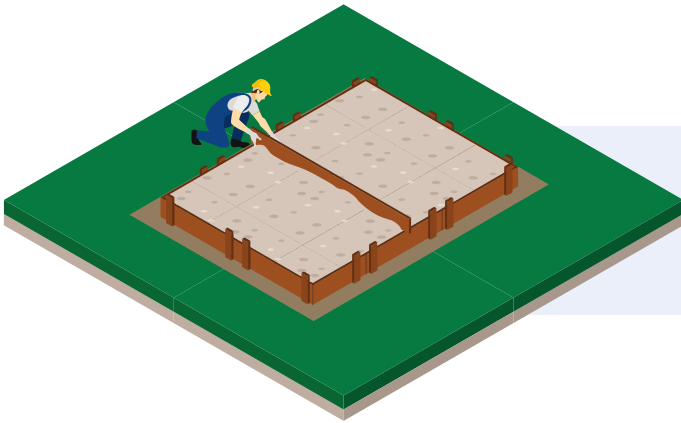

**D.**

Use a floating tool to compact the concrete even further. Remember to do this quickly before the concrete has chance to set.

